

# Rotary Glass Panel RF Remote Controller

Model No.: PK1(G), PK2(G), PK3(G)

Rotary dimming/1-3 color/Wireless remote 30m distance/CR2032 battery







PK1(G) 1 Zone Dimming

PK2(G) 1 Zone CCT

PK3(G) 1 Zone RGB

C€ RoHS @mc LVD RED

## **Features**

- Apply to single color, dual color or RGB LED controller.
- Rotate knob to change RGB color, color temperature or brightness, support long press or twice click operation.
- Each remote can match one or more receiver.
- CR2032 battery powered.

## Technical Parameters

 
Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	<5mA
Standby current	< 10µA
Standby time	1 year
Remote distance	30m(Barrier-free space)

Warranty	
Warranty	5 years


Safety and EMC	
EMC standard (EMC)	EN301 489,EN 62479
Safety standard(LVD)	EN60950
Radio Equipment(RED)	EN300 328
Certification	CE,EMC,LVD,RED

Environment	
Operation temperature	Ta:-30°C ~ +55°C
Case temperature (Max.)	Tc:+85°C
IP rating	IP20

## Mechanical Structures and Installations




## Replace battery:

 

Typical base as below:

## Installation diagram:

 

User Manual Ver 1.0.2

# Knob function

#### PK1(G) Single color dimming remote

• Push: Turn on or off light.

After turn on light:

- Rotate: Rotate knob to adjust brightness(2.5 turns, 50 levels).
- Long push(1-6s): Continuous 256 levels brightness adjustment.

### PK2(G) Color temperature remote

• Push: Turn on or off light.

After turn on light:

- Rotate: Rotate knob to change color temperature or brightness (2.5 turns, 50 levels).
- Push twice: Switch between color temperature or brightness adjustment.
- Long push(1-6s): Continuous 256 levels brightness adjustment.

#### PK3(G) RGB remote

• Push: Turn on or off light.

After turn on light:

- Rotate: Rotate knob to change RGB color (3 turns, 60 colors) or brightness (2.5 turns, 50 levels).
- Push twice: Switch between RGB color or brightness adjustment.
- Long push(1-6s): Continuous 256 levels brightness adjustment.

## Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

### Use the controller's Match key

#### Match

Short press match key, immediately push the knob. The LED indicator fast flash a few times means match is successful.

#### Delete.

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

#### Use Power Restart

#### Match:

Switch off the power, then switch on power again, immediately push the knob 3 times.

The light blinks 3 times means match is successful.

#### Delete:

Switch off the power, then switch on power again, immediately push the knob 5 times. The light blinks 5 times means all matched remotes were deleted.

# Safety information

- 1. Read all instructions carefully before you begin this installation.
- When installing battery, pay attention to the battery positive and negative polarity.
   A long time without the remote control, remove the battery.
   When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

User Manual Ver 1.0.2