

# R11, R12, R13, R14, R10

# RF DIM/CCT/RGB/RGBW/RGB+CCT

## Ultrathin Touch Slide RF Remote Controller

- Apply to single color, dual color ,RGB, RGB+W or RGB+CCT LED controller.
- Ultra sensitive color adjustment touch slide.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be easily stuck on back holder or any metal surfaces.
- White & Black available.




CE RoHS  LVD RED

### Technical Parameters

Input and Output		Safety and EMC		Package	
Output signal	RF(2.4GHz)	EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3	Size	L156 x W48 x H22mm
Working voltage	3VDC(CR2032)	EMC standard (EMC)	ETSI EN 301 489-17 V3.2.4	Gross weight	0.075kg
Working current	<5mA	Safety standard(LVD)	EN 62368-1:2020+A11:2020	<b>Environment</b>	
Standby current	<10µA	Radio Equipment(RED)	ETSI EN 300 328 V2.2.2	Operation temperature	Ta: -30 °C ~ +55 °C
Standby time	1 year	Certification	CE,EMC,LVD,RED	<b>Warranty</b>	
Remote distance	30m(Barrier-free space)			Warranty	5 years

### Mechanical Structures and Installations

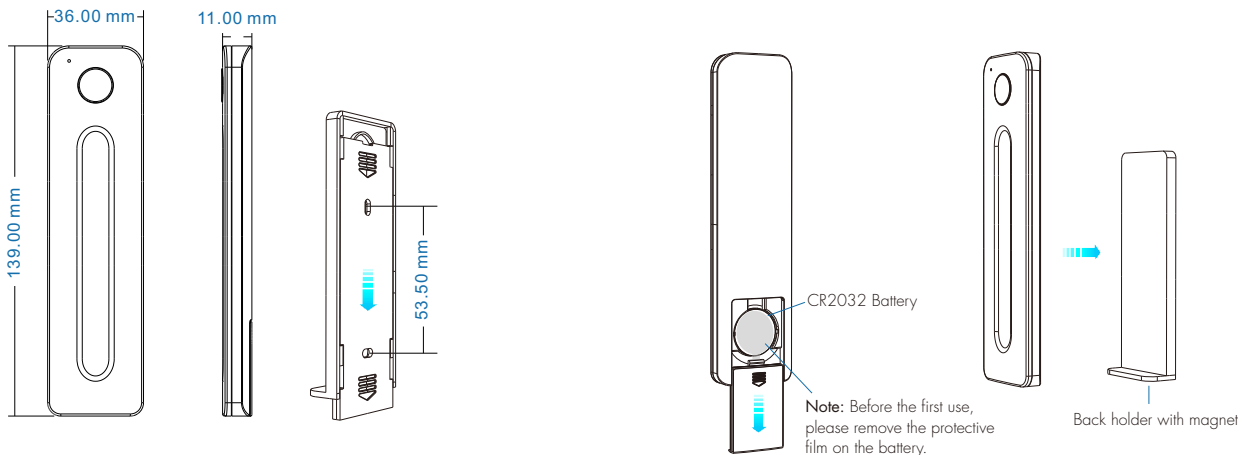

To fix the remote, three options are offered for selection:

- Option 1. can be adsorbed directly onto metal surfaces.
- Option 2. fix the remote' back holder on the wall with two screws.
- Option 3. adhere the remote' back holder to the wall with paster.

### Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

#### Use the controller's Match key

Match:  
Short press match key, immediately press on/off key on the remote.  
The LED indicator fast flash a few times means match is successful.


Delete:  
Press and hold match key for 5s to delete all match,  
The LED indicator fast flash a few times means all matched remotes were deleted.

#### Use Power Restart


Match:  
Switch off the power, then switch on power, repeat again.  
Immediately short press on/off key 3 times on the remote.  
The light blinks 3 times means match is successful.

Delete:  
Switch off the power, then switch on power, repeat again.  
Immediately short press on/off key 5 times on the remote.  
The light blinks 5 times means all matched remotes were deleted.


● R11 1 zone dimming remote

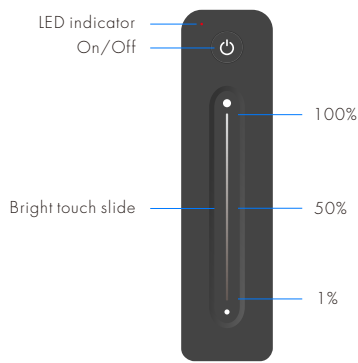


● R12 1 zone CCT remote

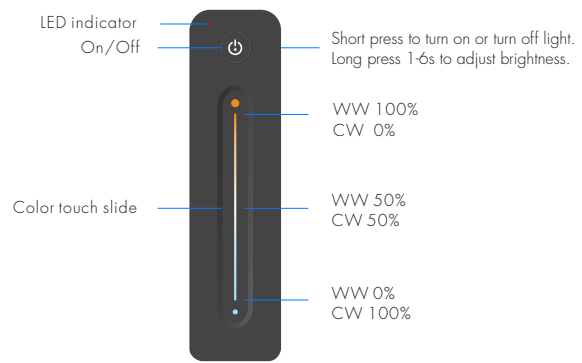


● R13 1 zone RGB remote

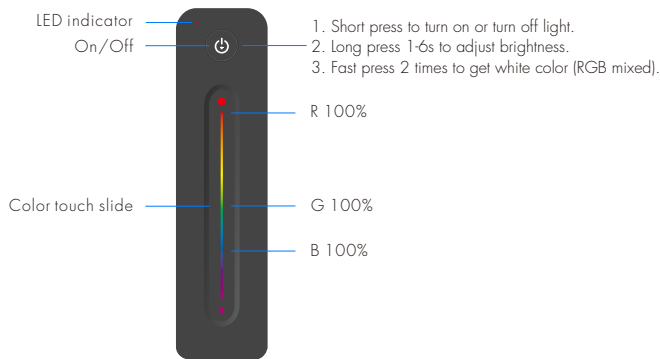

● R14 1 zone RGBW remote

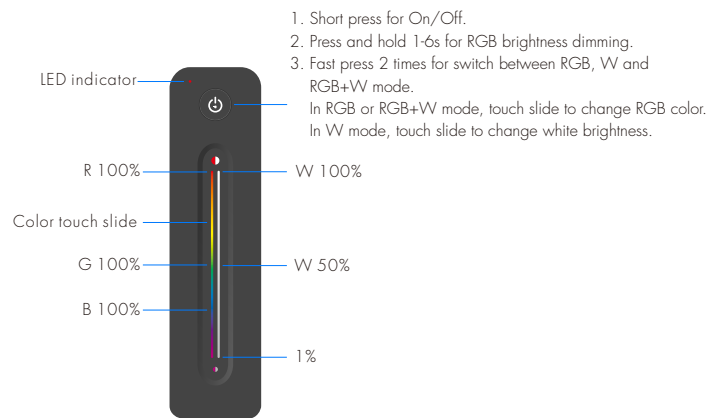

● R10 1 zone RGB+CCT

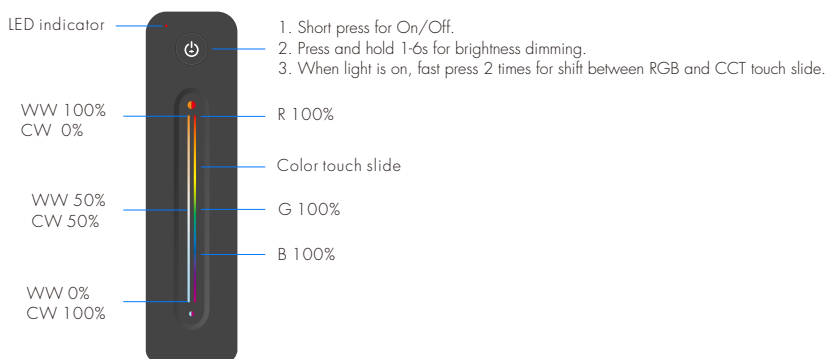

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.  
A long time without the remote control, remove the battery.  
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.