 


# Mi·Light<sup>®</sup>

## User Instruction

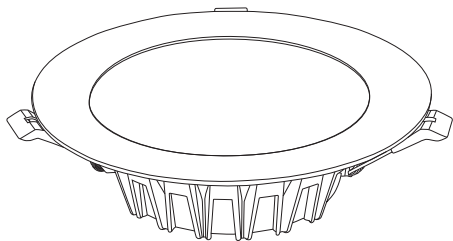

**2.4GHz RGB+CCT LED Downlight**

Model No.: FUT065

## Features



16 Millions  
of colors to choose



2.4GHz  
Radio Frequency



Color temperature  
2700~6500K



Remote control  
Control distance 30m



Dimmable  
Saturation control



Smart phone App control  
Mi-Light WiFi iBox is needed

## Parameters

Model No.: FUT065

Power: 18W

CRI: >80

PF: >0.5

Beam Angle: 120°

Hole Size:  $\varnothing$ 150mm

Material: Aluminum

Input Voltage: AC100~240V / 50/60Hz

 
Color Temperature: 2700K~6500K

Luminous Flux: 1500LM

Light Efficiency: 85LM/W





Lifespan: 50000 hours

Control Distance: 30m

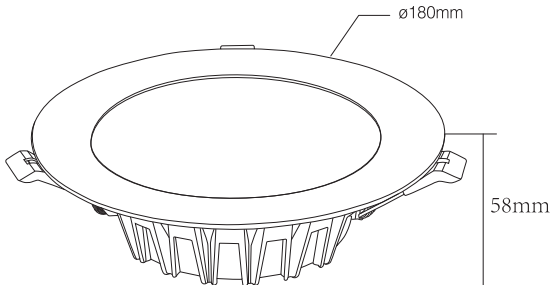


# Installation

    - 1). Please open the hole on the ceiling according to the correct size of Diagram 1.
- 2). Connect the driver properly according to the wire connection Diagram 2. (**Please ensure the power is not connected when you install the downlight**).
- 3). put the driver and wire into the ceiling from the hole.
- 4). Push in the two spring elements, make sure that they are deployed and anchored on the back of the ceiling.

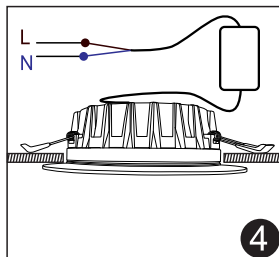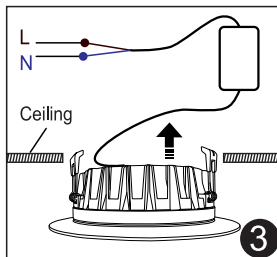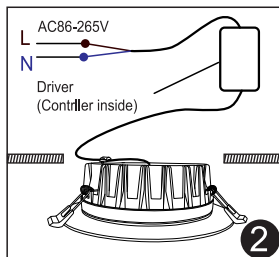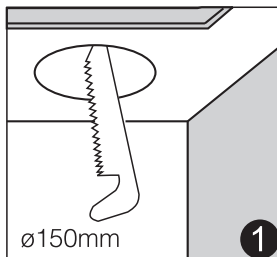

## 5. Link/Unlink

 Compatible with these remote controls (Purchased separately)

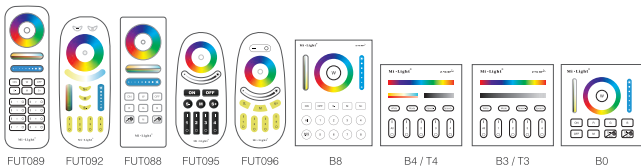

### NOTE:

Lighting can be working after linking with remote; for more details, pls read the remote instruction.

## 6. Caution

- 1). To reduce the risk of electric shock, please ensure the power is not connected when you install the downlight.
- 2). Notice! Amateurs do not disassemble or install the lamps. If the light is damaged, please seek professional electrical assistance, or please discard the light .
- 3). Lamp installation must be correct and strict, solid and reliable, avoid long time using in violent vibration place.
- 4). The lamps send out normal quantity of heat during working. Please don't use any cover to cover the body of the lamps.



Made in China